



## COTTON CANDY INSTRUCTIONS

TO START OPERATING: Plug in floss machine, turn the “Main Power & Motor” and the “Heat” switches to the ON position. With motor running, fill the floss head about 90% full with sugar floss (do not overflow). While filling, there may be a vibration type noise until the head is full. Turn the heat switch to high or emergency until the cotton candy starts being made. Once it starts, bring the “Heat” control to normal and continue making the cotton candy. The temperature control should be set in the 5 or 6 range.

When the floss is spun off the head, it will adhere to the side of the pan. Pick up one of the cones, hold it between your two fingers and thumb and break into the web of floss which is building up in the pan, lift the floss up and rotate onto the cone.

Remember, you must NOT operate the machine without floss in the head. Also, when you turn the MOTOR off, you MUST turn the HEAT off. If the heat is allowed to stay on while the motor is not running, it will burn up the motor.

You must use a **HEAVY DUTY, 3 PRONG EXTENSION CORD AND THIS MACHINE MUST BE OPERATED ON A SEPARATE, DEDICATED 110/120 VOLT, 20 AMP ELECTRICAL CIRCUIT.**