



INSTRUCTIONS FOR CRAWL-THRU AMUSEMENTS

- 1) THIS AMUSEMENT DEVICE SHOULD HAVE 2 ATTENDANTS – ONE AT THE FRONT, ONE AT THE BACK.
- 2) CHILDREN SHOULD REMOVE THEIR SHOES TO ENTER.
- 3) THE CRAWL-THRU AMUSEMENTS ARE DESIGNED FOR YOUNG CHILDREN UNDER THE AGE OF 10 YEARS. NO MORE THAN 6 CHILDREN SHOULD BE IN THE DEVICE AT ANY ONE TIME.
- 4) IF THIS UNIT HAS A SLIDE, THE CHILDREN SHOULD BE INSTRUCTED TO **SLIDE OUT THE EXIT ON THEIR BOTTOM, FEET FIRST. NO FLIPPING!**
- 5) THERE ARE 2 BLOWERS ON THESE DEVICES.
- 6) IF THE BLOWER STOPS, CLEAR ALL THE CHILDREN OUT OF THE AMUSEMENT. CHECK THE EXTENSION CORDS TO MAKE SURE THEY HAVE NOT BEEN REMOVED FROM THE POWER SOURCE. PINCH OFF THE INFLATION TUBE TO STOP THE FLOW OF AIR BACK INTO THE BLOWER. WHEN THE BLOWER FAN COMES TO A COMPLETE STOP, RE-PLUG THE EXTENSION CORD INTO THE POWER SOURCE. THE AMUSEMENT DEVICE WILL RE-INFLATE WITHIN MINUTES.